

ULTRABOND S955 1K

One-component, solvent-free, (according to TRGS 610) sililated polymer-based adhesive with a very low emission level of volatile organic compounds (EMICODE EC1 Plus), for all types of parquet



WHERE TO USE

Bonding solid wooden floors or pre-finished multy-layered wooden floors of all types and formats.

Some application examples

Ultrabond S955 1K is used for bonding pre-finished wooden floors, lamparquet, slats, floor-boards and all types of parquet on: cementitious screeds, screeds made using **Mapecem**, **Mapecem Pronto**, **Topcem**, **Topcem Pronto** and similar products, old wooden floors, ceramic, marble, terrazzo, etc. and anhydrite screeds. It is also suitable for heated substrates.

TECHNICAL CHARACTERISTICS

Ultrabond S955 1K is a one-component, sililated polymer-based adhesive without water, solvents (according to TRGS 610), with a very low emission level of volatile organic compounds (EMICODE EC1 Plus). It is manufactured according to a technology developed in MAPEI's own research laboratories and has the following characteristics:

- one-component, ready-to-use product; no catalyser is required, therefore no mixing. If stored correctly, remaining quantities of the product may be used again at a later date;
- GEV certified, as a product with a very low emission level of volatile organic compounds (EMICODE EC1 Plus);
- compatible with **Ultracoat** water based varnishes and bases and the oils from the **Ultracoat** range;
- no hazard or risk statements or symbols;
- easy to apply with excellent ridge holding;
- 20-30% more yield compared with conventional two-component adhesives, thanks to its low viscosity and free-flowing properties when applied by trowel;
- totally free of solvents (according to TRGS 610);
- easy to remove from pre-finished elements.

RECOMMENDATIONS

- Before installation starts, doors and windows should be installed.

- The humidity level in the screed must be compliant with that prescribed by the current standards for the installation of wood, and as indicated in the technical data sheet for the parquet.
- If the substrate is not thoroughly dried, or if the residual humidity is higher than the level prescribed, we recommend the use of a suitable waterproofing primer, such as **Planiseal PU 1K**, **Primer MF**, etc.
- If there is a risk of rising damp, a vapour barrier must be installed before laying the screed.
- Do not use **Ultrabond S955 1K** if the temperature is lower than +10°C or higher than +35°C.
- When transported over long distances, thermally insulated containers may be required.

APPLICATION PROCEDURE

Preparation of the substrate

The substrate must be checked carefully to assess its condition, and to prepare it for laying parquet.

- **Cementitious screeds:** must be well cured, dry, flat and mechanically strong. The surface must be free of dust, loose parts, oil, paint, etc. The level of humidity in the screed must be measured using a carbide hygrometer. To solve problems of residual humidity levels higher than those prescribed for laying, wait until the screed is dry, or apply a suitable waterproofing primer, such as **Planiseal PU 1K**, **Primer MF**, **Primer EP**, **Primer PU60**, **Triblock P**, etc. Cracks in the substrate must be repaired beforehand with a product such as **Eporip**, **Eporip Turbo**, **Epojet**, etc.
For installation on surfaces with traces of glue or old existing smoothing compounds, or for substrates in wood marine plywood, chipboard, ceramic or natural stone, use **Eco Prim T Plus**.
Excessively rough or uneven surfaces should be levelled using a smoothing compound with high mechanical properties, such as **Fiberplan**, **Ultraplan**, **Ultraplan Maxi**, **Nivorapid**, etc., chosen according to the thickness to be installed. Installation may be carried out once it has cured (see the relevant product technical data sheet). To install rapid-drying, controlled-shrinkage screeds, use a special MAPEI hydraulic binder: **Mapecem**, which allows for installation after 24 hours, or **Topcem** for installation after 4 days. **Topcem Pronto** or **Mapecem Pronto** pre-blended, ready-to-use mortar may be used as an alternative, wood may be laid after 4 days and 24 hours, respectively. In the presence of lightweight layers or insulation, or in the case of screeds installed directly on the ground, a vapour barrier must be installed to avoid rising damp.
- **Old floors in ceramic, marble, etc.** must be carefully cleaned and degreased before bonding. The adhesive may only be applied once the surface is dry.
- **Wooden floors:** make sure wooden floorboards are rigidly fixed to the substrate. Remove old paint or wax with sandpaper down to the bear wood, and remove all dust. The adhesive may then be applied.
- **Anhydrite substrates:** check and follow the instructions of the manufacturer of the screed. Always check if the screed should be sanded and primed. MAPEI recommends sanding and priming with **Planiseal PU 1K**, **Planiseal PU 1K Turbo**, **Primer MF** and **Primer MF EC Plus**. MAPEI declines all responsibilities if all the screed manufacturer's recommendations have not been followed. In case of doubt do not hesitate to contact your local MAPEI's Technical Services Department.


Spreading the adhesive

Spread the adhesive on the substrate using a MAPEI notched trowel for wood.

Wood has to be laid within approximately 50-60 minutes under normal temperature conditions (at +23°C and 50% R.H.). If left-over adhesive from previous applications is to be used, open the drum, remove the skin formed on the surface of the adhesive and proceed as above. The layer of skin helps to preserve the left-over adhesive.



Easy opening of the bucket

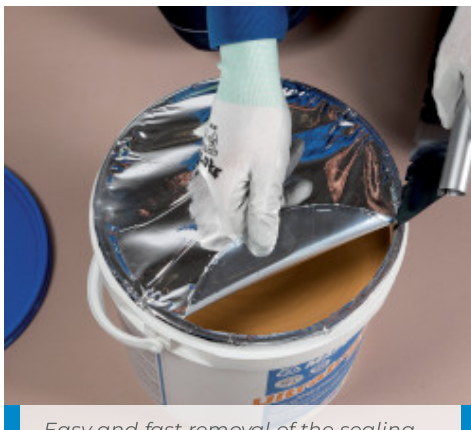


Easy and fast removal of the sealing film



Excellent stability of the product



Excellent workability and rib stability

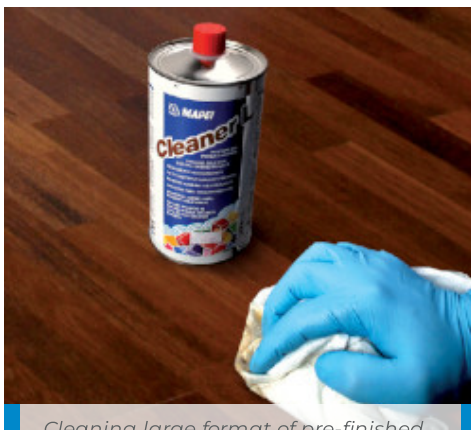

Cleaning large format of pre-finished parquet with Cleaner L

SET TO LIGHT FOOT TRAFFIC

Floors may be walked on after approximately 12 hours.

POLISHING

The floor may be polished after 3 days. Residual adhesive on the surface of the floor may be easily removed by using **Cleaner L**.

CLEANING

Ultrabond S955 1K may be removed using **Cleaner L** or other special cleaning solutions while still fresh. Once hardened, it must be removed mechanically or with **Pulicol 2000**.

CONSUMPTION

800-1200 g/m².

PACKAGING

15 kg plastic drums.

STORAGE

12 months in its original, well-sealed container stored under normal conditions.

SAFETY INSTRUCTIONS FOR PREPARATION AND APPLICATION

Instructions for the safe use of our products can be found on the latest version of the Safety Data Sheet, available from our website www.mapei.com.

PRODUCT FOR PROFESSIONAL USE.

TECHNICAL DATA (typical values)

PRODUCT IDENTITY

Consistency:	creamy paste
Colour:	beige or brown
Density:	1.65 ± 0.05 g/cm ³
Dry solids content:	98%
Brookfield viscosity:	35,000 ± 5,000 mPa·s (rotor 7 - 50 rpm)
EMICODE:	EC1 Plus - very low emission

APPLICATION DATA (at +23°C and 50% R.H.)

Recommended application temperature range:	from +10°C to +35°C
Open time (formation of surface skin):	40 minutes
Adjustment time:	120 minutes
Set to light foot traffic:	approx. 12 hours
Polishing:	after 3 days

FINAL PERFORMANCE

Shore A hardness (7 days at +23°C):	45
Wood - concrete bond:	> 2 N/mm ²
Wood - ceramic bond:	> 2 N/mm ²
Elongation at breakage (7 days at +23°C):	120%
In service temperature range:	from -20°C to +80°C

WARNING

Although the technical details and recommendations contained in this product data sheet correspond to the best of our knowledge and experience, all the above information must, in every case, be taken as merely indicative and subject to confirmation after long-term practical application; for this reason, anyone who intends to use the product must ensure beforehand that it is suitable for the envisaged application. In every case, the user alone is fully responsible for any consequences deriving from the use of the product.

Please refer to the current version of the Technical Data Sheet, available from our website www.mapei.com

LEGAL NOTICE

The contents of this Technical Data Sheet ("TDS") may be copied into another project-related document, but the resulting document shall not supplement or replace requirements per the TDS in force at the time of the MAPEI product installation.

The most up-to-date TDS can be downloaded from our website www.mapei.com.

ANY ALTERATION TO THE WORDING OR REQUIREMENTS CONTAINED OR DERIVED FROM THIS TDS EXCLUDES THE RESPONSIBILITY OF MAPEI.

Mapei S.p.A.

Via Cafiero, 22, 20158, Milano



+39-02-376731



www.mapei.com



mapei@mapei.it

270-9-2026 en (IT)

Any reproduction of texts, photos and illustrations published here is prohibited and subject to prosecution

